




How to remove the automatic braking (on power off) in the SCP1





This document applies ONLY to the first version (small retriggerable fuse) of the analog cartridge of the SCP-1, positive polarity (common ground). For later versions, a dip-switch is provided to the same effect, please refer to the most recent version of the manual.

WARNING: this procedure might VOID your warranty. We reserve the right to refuse warranty repair of cartridge boards where this operation is performed in a way that damages the board itself.

1. Disassemble the PCB from the cartridge, to expose the bottom part of the board

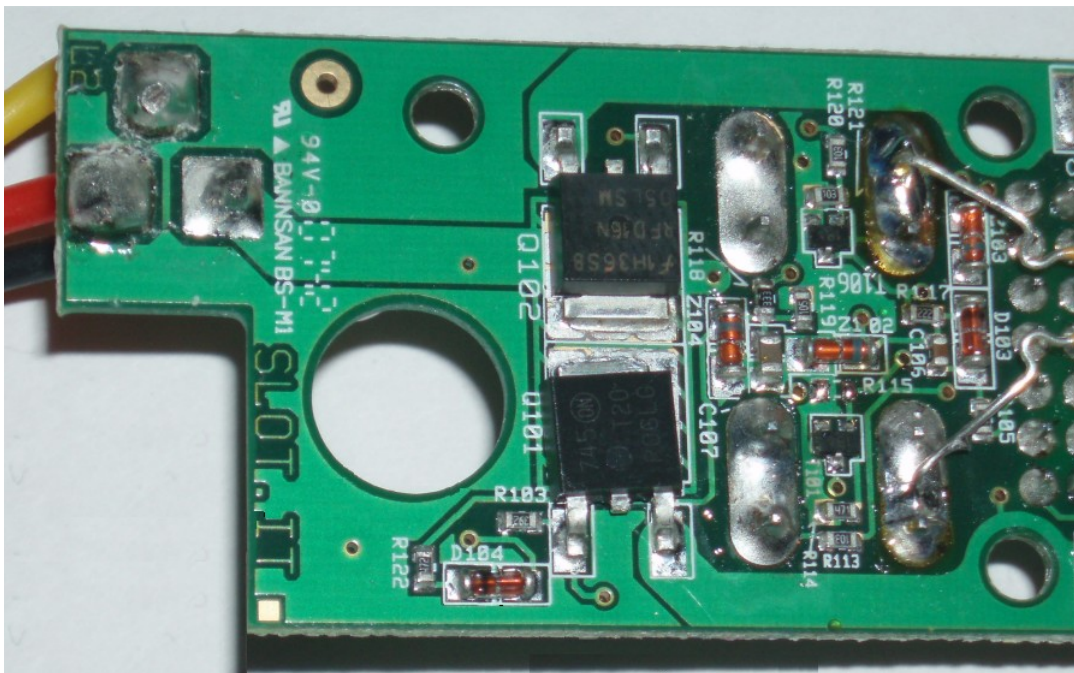

2. Cut the RED line with a cutter's edge, or, remove diode D104

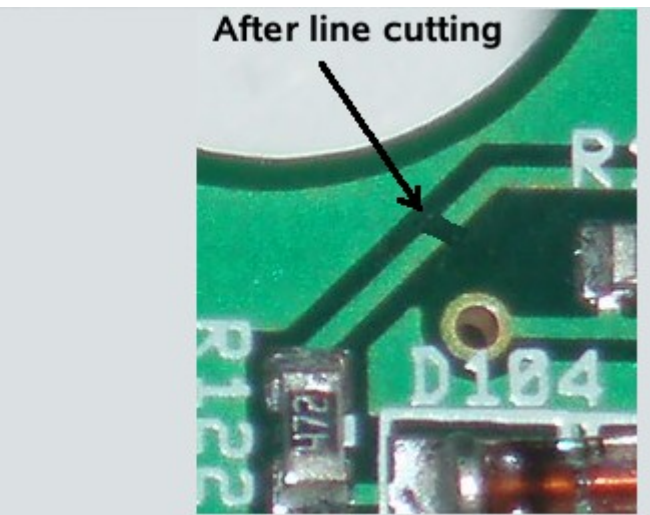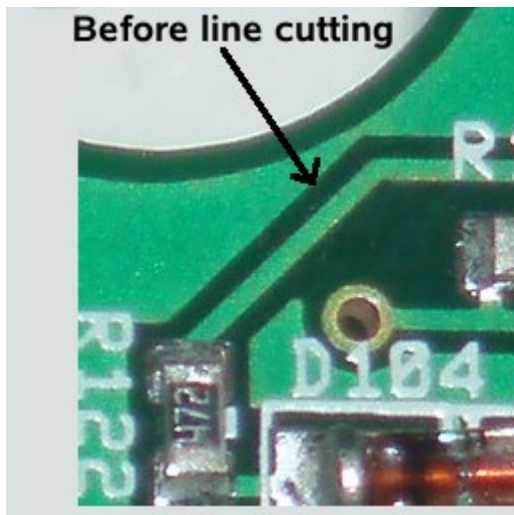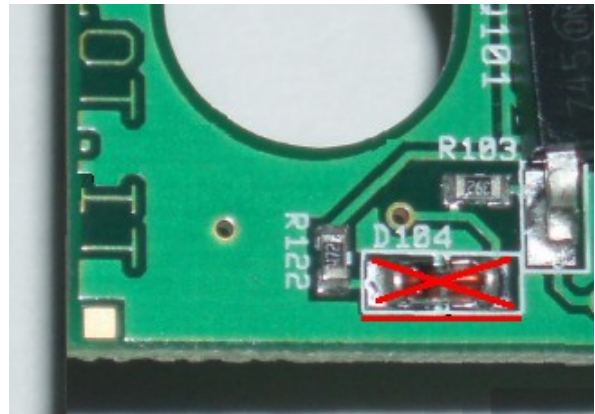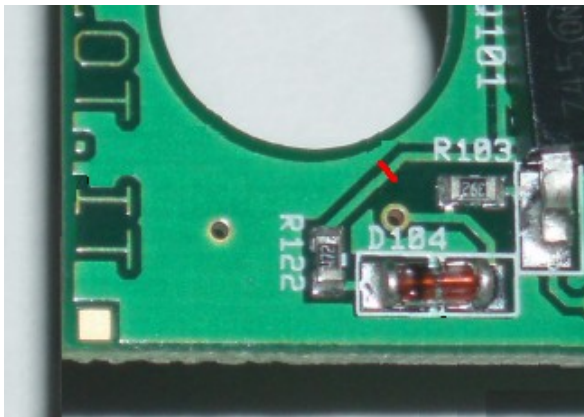

3. Reassemble the cartridge